

Diagnostic Kit Overview



Choose from one of the three different test connector sets to make a kit. Parts numbers are listed below.

Choose one:

- (x2) XEL
- (x2) 8064
- (x2) 610XJL (3")

Included in all kits:

- (x2) 31
- (x2) 8016
- (x2) 9468
- (x4) 9820 (two 18" and two 48")
- (x1) 9183 (144")

Images and descriptions are in the Kit Components Overview section.

Diagnostic Kit Options



Kit Part Numbers

Test leads in kits come with either PVC or Silicone wire insulation.


PVC Kits	Silicone Kits	Connector
3604	3605	XEL
3504	3505	610XJL
3611	3612	8064

For customized kits, call manufacturer. Parts also available in additional color options.

Comparing Test Connectors

XEL Insulation-Piercing Hook Adapter

- Needle pierces 28-14 AWG wire
- T-handle accepts both (un)shrouded standard banana plugs
- 2 standard shrouded sockets on either side

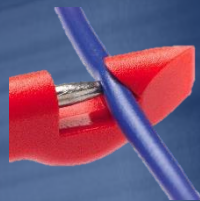


610XJL Insulation Piercing Hook Test Lead

- Needle pierces 22-12 AWG wire
- Standard banana socket connected to XJL test connector with 3" test wire; accepts standard unshrouded banana plug



8064 Back Probe

- Small diameter needle allows user to insert probe past wire to an internal connection point
- Standard banana socket accepts both (un)shrouded standard banana plugs

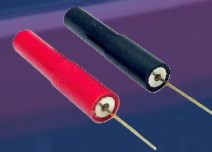


Kit Components Overview



XEL - Insulation-Piercing Macro Hook with 2 Banana Sockets



610XJL (PVC) / 410XJL (Silicone) - Insulation Piercing Macro Hook with Banana Socket Test Lead

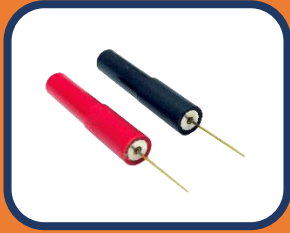

8064 - Back Probe with Banana Socket Adapter



31 - Pin Tip Test Probe with Banana Socket Adapter



8016 - Insulated Standard Alligator Clip with Banana Socket Adapter



9468 - Insulated Large Alligator Clip with Banana Socket Adapter



9183 (PVC) / 9898 (Silicone) - Standard Banana Plug Jumper



9820 (PVC) / 9897 (Silicone) - Standard Banana Plug Jumper

Diagnostic Test Lead Set



Same leads from diagnostic kits. Set includes 5 standard banana plug 18 AWG test leads in a heavy-duty zippered bag:

- (X2) 18" right angle to straight banana plugs
- (X2) 48" right angle to straight banana plugs
- (X1) 144" straight to straight banana plugs

Test Lead Set, **3519 (PVC) / 3520 (Silicone)**

Shop All Diagnostic Products



Scan barcode to shop E-Z-Hook's industry specific diagnostic parts or call for quote on custom configurations



E-Z-HOOK[®]

DIAGNOSTIC TEST KITS

1.800.995.4665 - www.e-z-hook.com

5108 Azusa Canyon Road Irwindale, CA 91706



No order minimum



Made in the USA



Custom kits available